



## Polystyrene 6 Frame Nuc Super Assembly Instructions

(LYSON W1129 WITH LATCHES)

Congratulations on your purchase of the new Lyson Polystyrene nuc super. To ensure your hive functions properly please read this information before you use your hive.

### You will need:

- Drill with Philips head bit (recommended) or standard Philips head screwdriver.
- Exterior latex paint and painting equipment.

### Components Included:



- Components for the deep nuc super:
  - o 2 long flat sides
  - o 2 shorter sides with handles
- Twelve 3.5" screws for hive assembly
- Latch Components:
  - o Latch catch: 2
  - o Latch stirrup: 2
  - o Latch: 2

\*Note: Latch and Latch stirrup may be attached. See page 2 for a picture.

  - o Twelve 1" screws for latch assembly

### Instructions

1. Please ensure you have all the components.
2. Assemble Deep Nuc Super  
Using the 3.5" screws, screw 6 screws into the placement holes on each short side of the super to connect the long sides. Make sure the short side and long side fit per photos below. Repeat for the second deep box. Do not to overtighten screws. Drill straight to prevent the screw from popping through the polystyrene on the long side of the super.

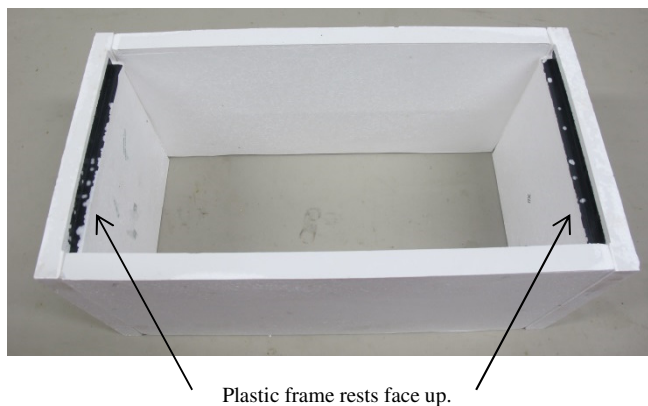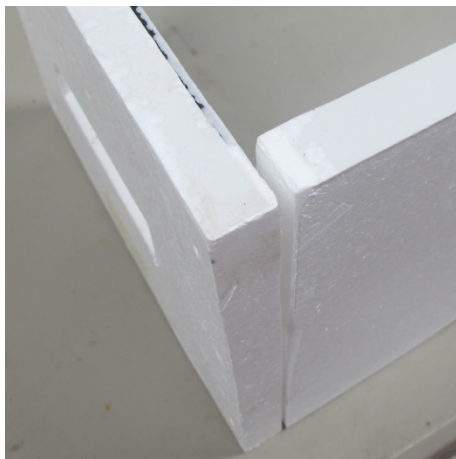

3. Paint equipment


After assembly but before you install the latch hardware, paint the hive to protect the exterior surfaces. Paint any surface that is exposed to the outside elements. Use latex based exterior paint.

4. Install latch hardware

Once the paint is dry, you can install the latch hardware. Use the 1" screws and screw into the pre-formed plastic inserts with guide holes on the short sides of the super.

First, attach the latch stirrups to the latch (this may already be done for you). Do not screw these all the way down the latch as you risk breaking the hardware when you attach the hive components. You can adjust these when you put the hive together by screwing or unscrewing the latch stirrup on the latch.

Install the following hardware on each short side. See pictures below:

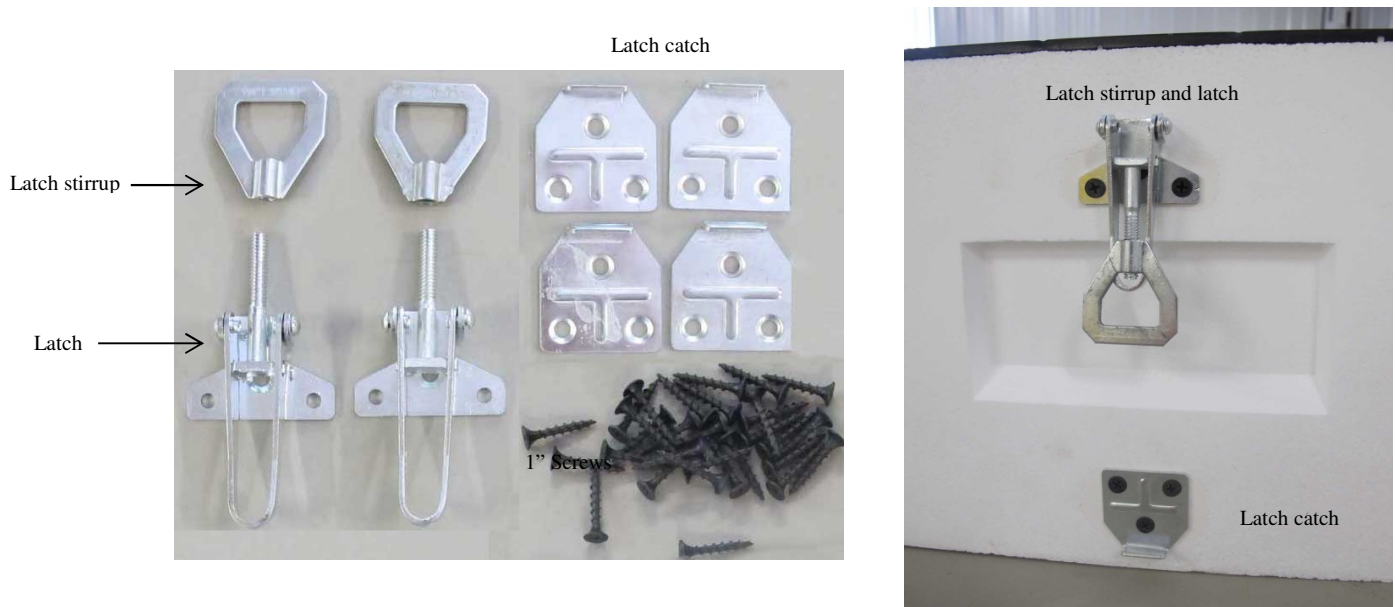

Once complete, your deep nuc super should look like this, but painted!

